



# Installation Guide Access Hatch DeckenTüre

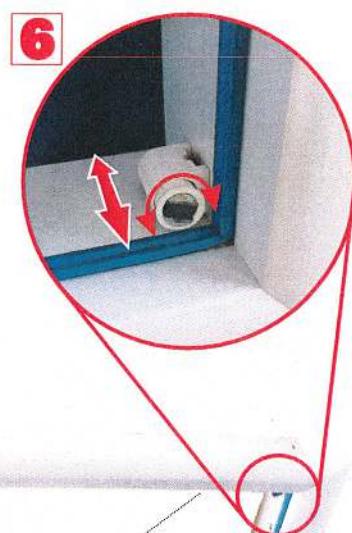

Glue in sealing tape  
(Installation Guide Connection System)


- 1** To make installation easier:  
**Detach hatch door with concealed hinges:**

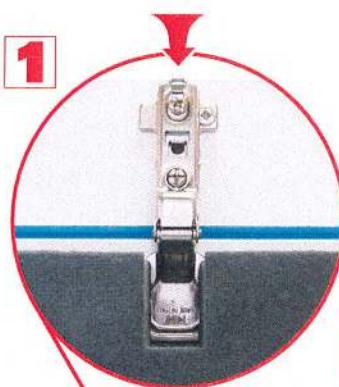

- 2** Place frame in ceiling opening and adjust:  
 - even out the surrounding gap (max. 2 cm)  
 - flush to ceiling (spirit level)  
 - at right angles (remeasure diagonals)  
 Underlay and screw tight (2x per side).


**2**

- 3** Screw ring eye flush into catch.

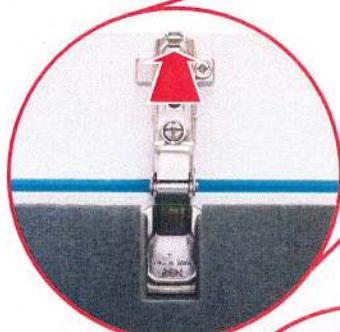

**3**

- 4** Click hatch door back into place:

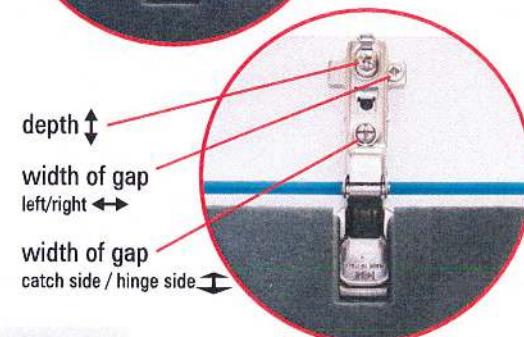

- 5** Align hatch door exactly:  
Adjustments with the appropriate screws:

depth ↑  
width of gap left/right ←→  
width of gap catch side / hinge side ↗

**3**

**Thermal Protection WS Connection System logo**  
Push in insulation braid,  
glue on sealing tape.  
(Installation Guide Connection System)

- 6** Adjust magnets for proper closing.

**Safety instruction:**  
**Do not lean ladder on access hatch door!**

After completion of any other work on the ceiling:


- 7** Mount architraves:  
Interlock. Test. Uncover adhesive tape. Press on firmly. Fix.  
(Installation Guide Architraves)

# Installation Guide Architraves

Unpack and mount architraves only after completion of any other work on the ceiling!


## 1 Interlock frame:

Interlock architraves to form a frame with the help of corner joints.

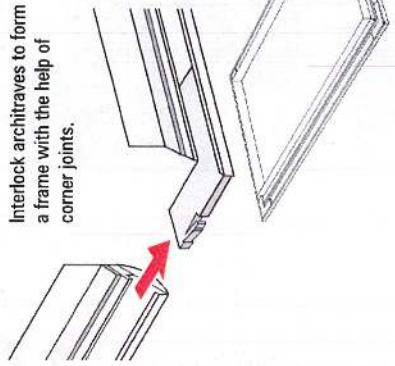


## 2 Attach frame by way of trial.

## 3 Uncover adhesive tape:

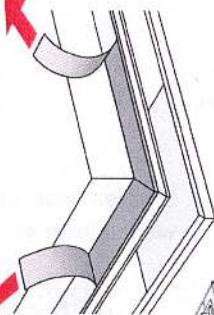

## 4 Mount architraves:


Keep attic hatch closed and press frame from below onto clean lining bar and press firmly.

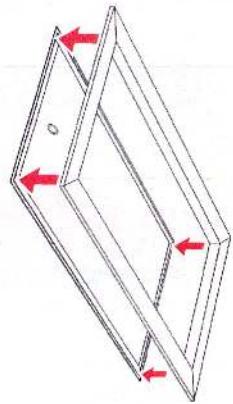


## 5 Secure architraves

with enclosed screws:  
- use Bit-T10

- opening side 1x
- both longitudinal sides 2x
- distance to bottom edge 1.5 cm
- distance to corner 20 cm

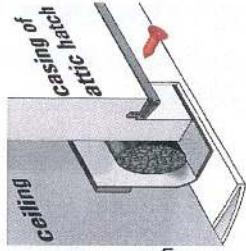

## 6 Remove protective foil from architrave bottom.




**wellhöfer**  
TREPPIEN AUS WÜRZBURG

# Installation Guide Architraves

Unpack and mount architraves only after completion of any other work on the ceiling!


## 1 Interlock frame:

Interlock architraves to form a frame with the help of corner joints.

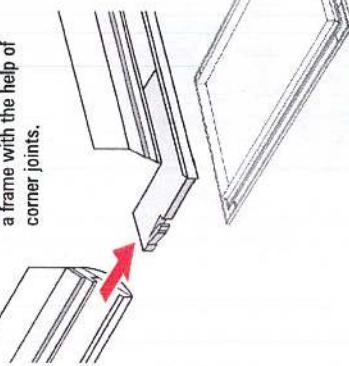


## 2 Attach frame by way of trial.

## 3 Uncover adhesive tape:

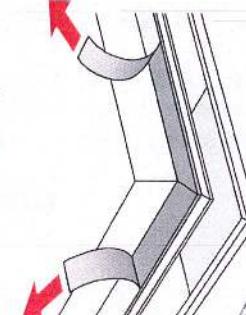

## 4 Mount architraves:


Keep attic hatch closed and press frame from below onto clean lining bar and press firmly.

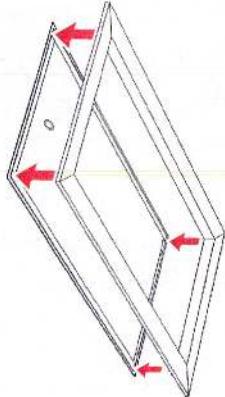

## 5 Secure architraves

with enclosed screws:  
- use Bit-T10

- opening sides 1x
- both longitudinal sides 2x
- distance to bottom edge 1.5 cm
- distance to corner 20 cm

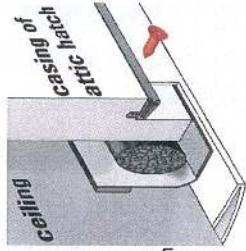


## 6 Remove protective foil from architrave bottom.




**wellhöfer**  
TREPPIEN AUS WÜRZBURG

# Installation Guide Connection System

**⚠ Always apply sealing tape prior to installation of attic hatch!**  
**Watch ceiling construction!** (see below)

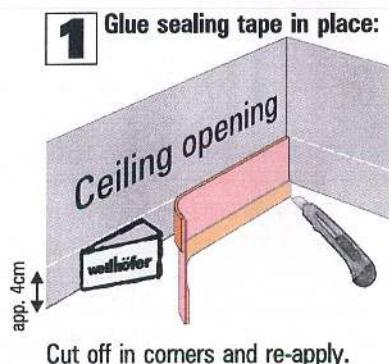

Cut off in corners and re-apply.

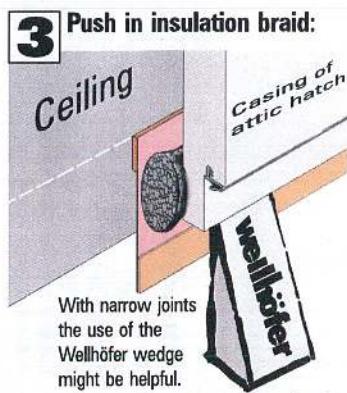


With narrow joints  
the use of the  
Wellhöfer wedge  
might be helpful.

Cut off in corners and re-apply. For  
close connection upset joints in  
the corners.



For attic stairs with fire protection:  
Push in hardly flammable fire protection  
braid instead of insulating braid!  
(see Installation Guide Attic Hatch)

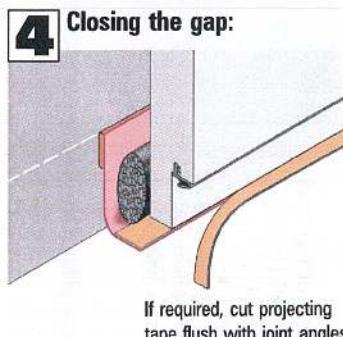

If required, cut projecting  
tape flush with joint angles.

Glue sealing tape to lining bar all  
over.



Full effect is gained only if the ceiling connection system  
has been implemented as described above.


**wellhöfer**  
TREPPIEN AUS WÜRZBURG

## Correct air-tight connection:


**⚠ Glue Wellhöfer sealing tape tightly and securely onto the on-site air-tight barrier!**  
**Watch ceiling construction / thermal bridges / fire protection regulations and  
where necessary fill additional insulation into gap on-site.**




Concrete ceiling

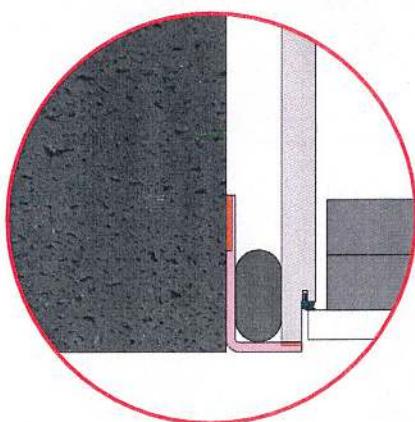

Suspended ceiling

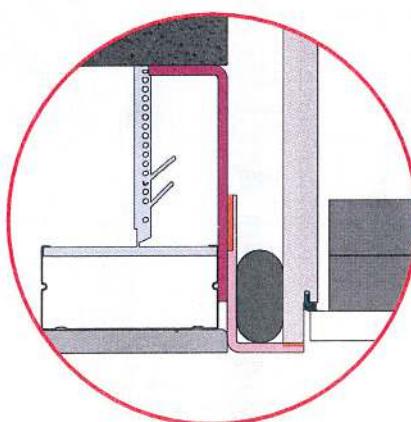

Wooden beam ceiling  
with counter battens

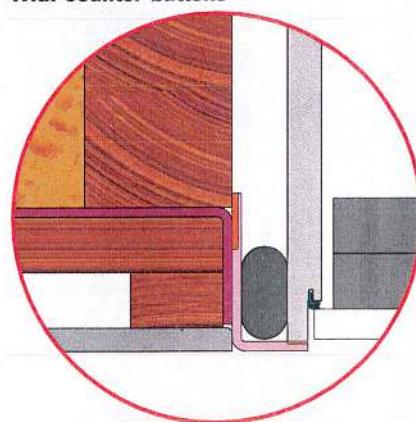

Wellhöfer thermal protection WS with connection system:  
Meet the requirements of the EnEV (German Energy Saving Act).

**wellhöfer**  
TREPPIEN AUS WÜRZBURG